



Crown molding installation instructions

Paint with water-based paints only. Brush one coat or spray two coats.

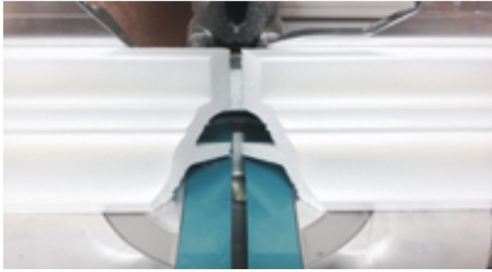

Cut 3-1/2", 4-1/2" and 5-1/2" crown moldings in most 12" miter saws in this position.

Cut 3-1/2", crown moldings in most 10" and 12" miter saws in both saw positions.


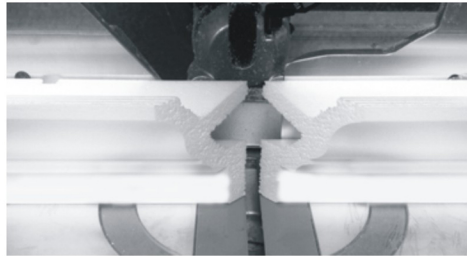


Just apply a bead of painters caulk about the size of a pencil horizontally across locations for the different installation types. Press it to the wall and wipe off any excess caulk on the seams.

When installing to wall and ceiling



When installing to wall only. (indirect lighting)

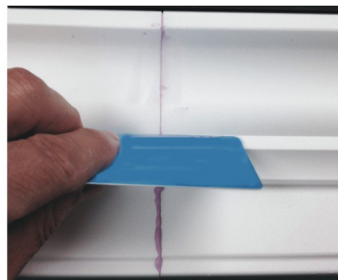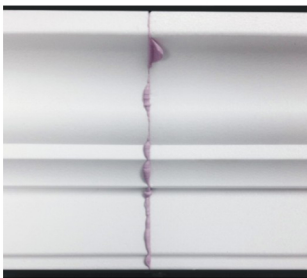

Apply sandable spackle to the joint of the crown moldings that matches together. You can even apply the spackle to the ends of the moldings as they go together. Wipe or smooth off the joint with a caulking tool or a plastic card.

Next, let the spackle dry well and then sand off the spackle with a 150-200 grit sandpaper. Now you can touch up the joint with paint for a finished look.

TIP: Never use painters caulk in vertical joints between corners. Always use spackle.

Use painters caulk for installing the crown molding along the vertical seams.

Use painters caulk for your inside and outside corners. Apply caulk on the cut ends of the molding before aligning them up for a better bond.