

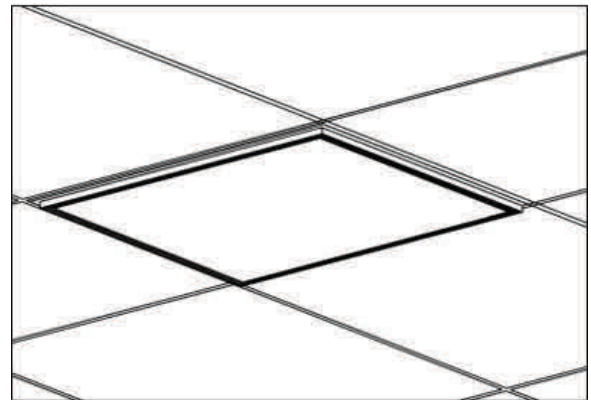
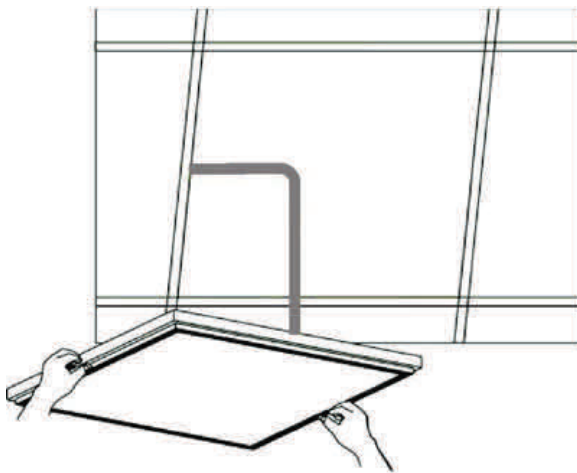
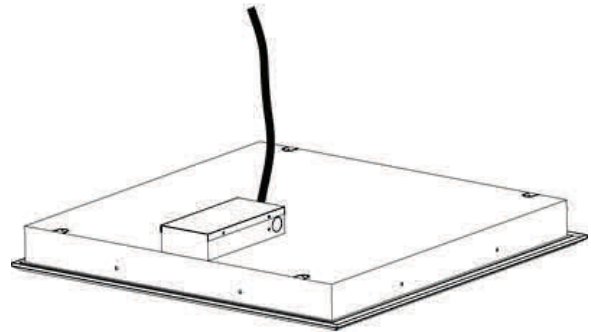
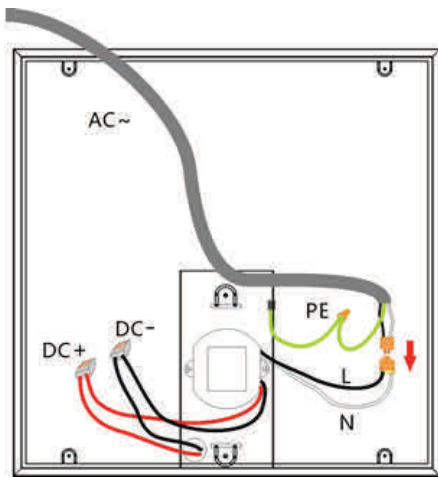
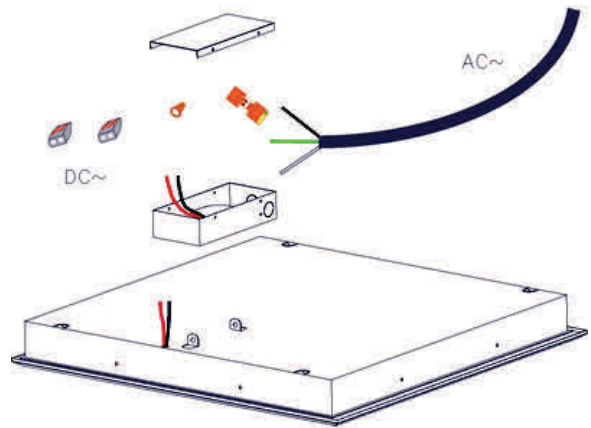


Flat Panel Troffers Installation Options—Grid Ceiling

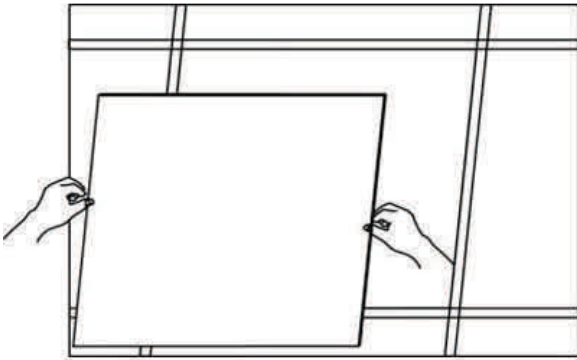







1. Turn off main power and remove ceiling panel.
2. Mount the driver box to the back of the panel.
3. Connect the input and ground wires (bare end) of the driver box to the main power outlet.
4. Connect the panel to the corresponding connectors on the output wires of the driver box.
5. Fix the panel into the ceiling.

Flat Panel Troffers Installation Options—Surface Ceiling

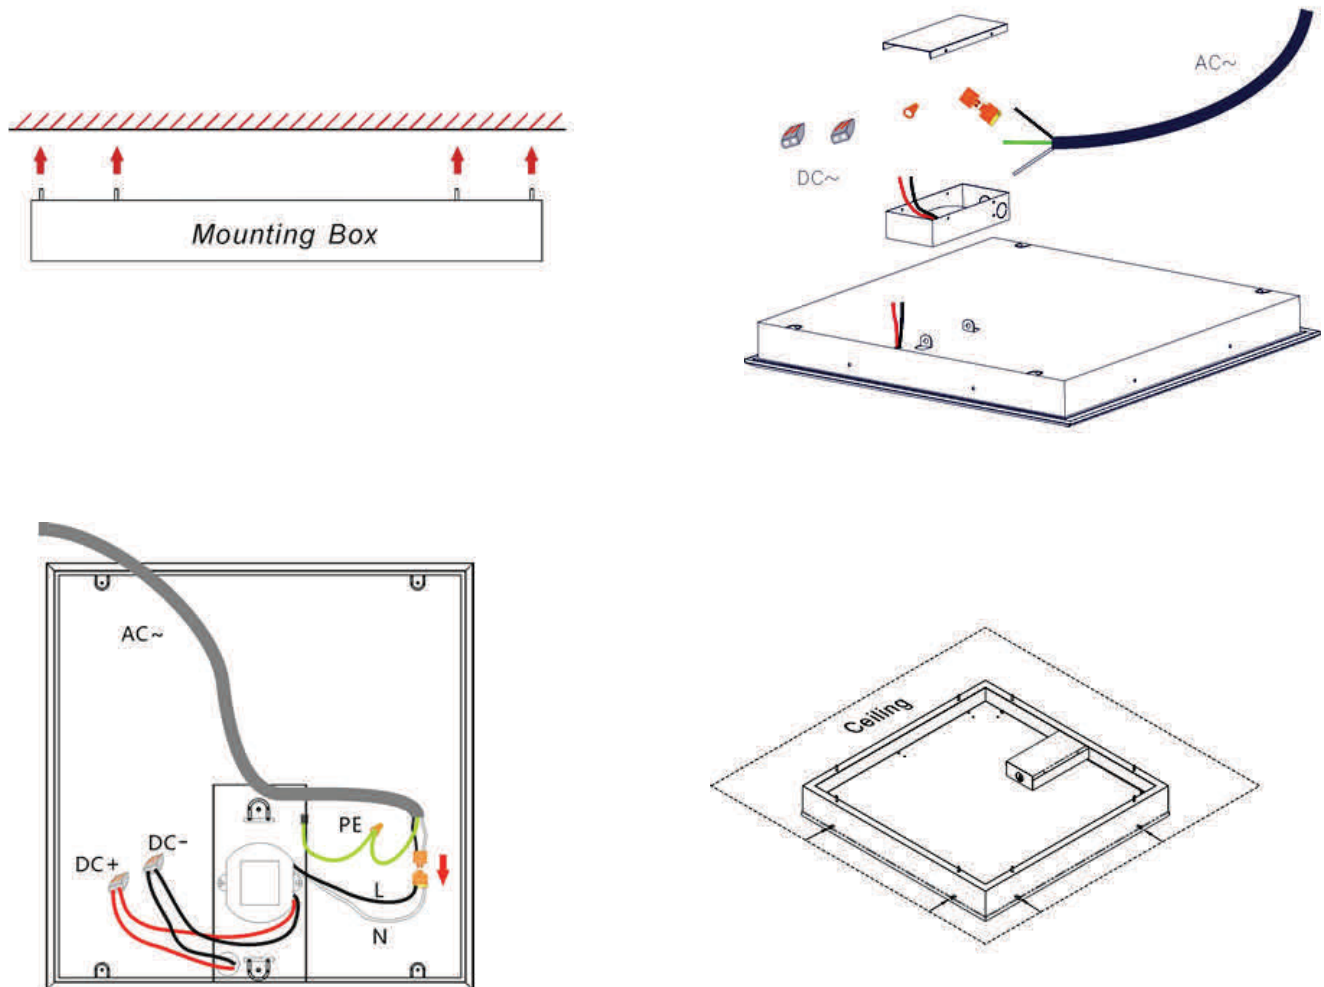

1. Turn off main power and fix the mounting box to the ceiling with screws. The mounting box is an optional accessory..
2. Mount the driver box to the back of the panel.
3. Connect the input and ground wires (bare end) of the driver box to the main power outlet.
4. Connect the panel to the corresponding connectors on the output wires of the driver box.
5. Fix the panel to the mounting box with screws from the side.

Flat Panel Troffers Installation Options—Suspended Ceiling

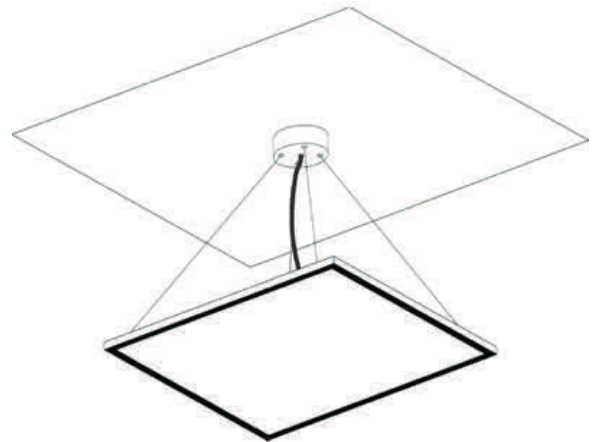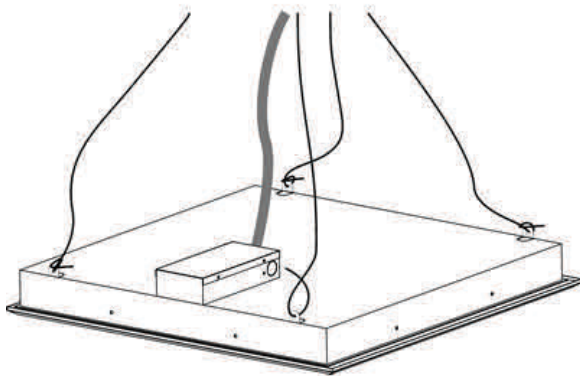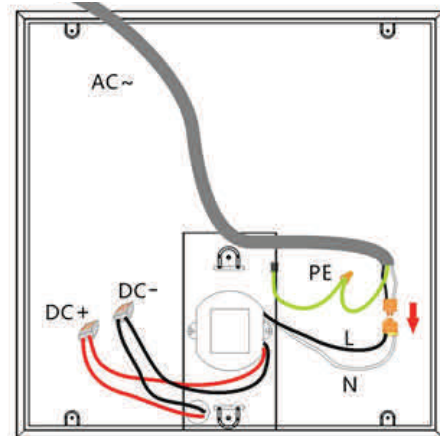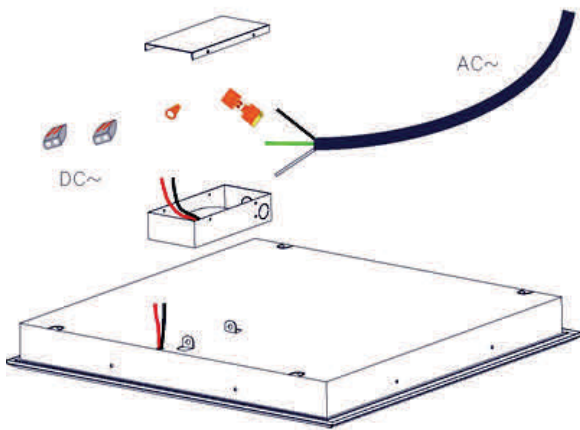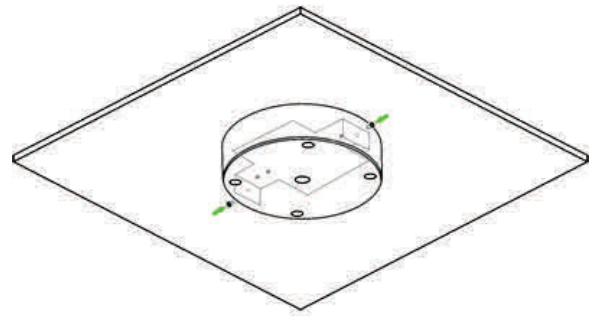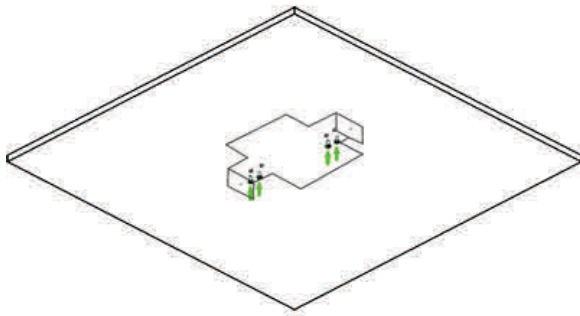

1. Turn off main power and fix the suspended box to the ceiling with screws.
2. Mount the driver box to the back of the panel.
3. Connect the input and ground wires (bare end) of the driver box to the main power outlet.
4. Connect the panel to the corresponding connectors on the output wires of the driver box.
5. Fasten the suspended cables to the hooks of the panel. Cables are an optional accessory.